Instructions
ASV-PV (5 - 25 kPa) → ASV-PV (20 - 40 kPa)

❶

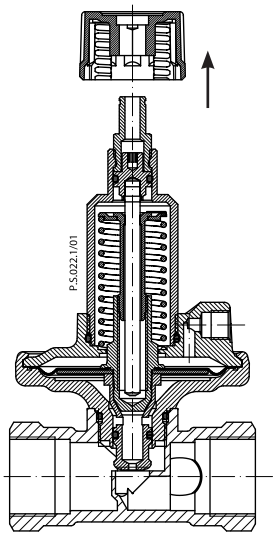

❷

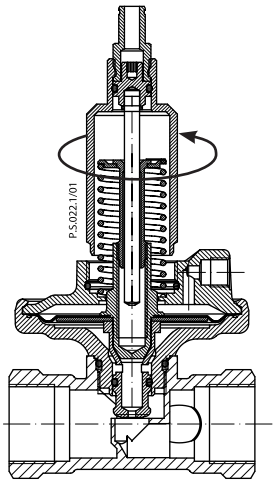

❸

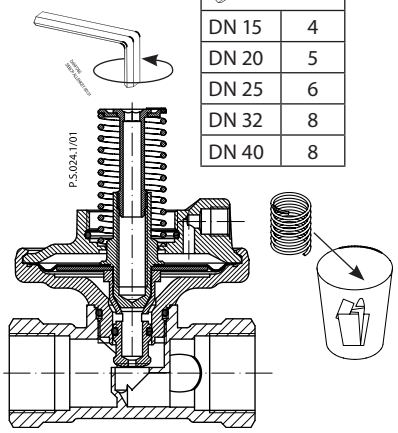

DN 15	4
DN 20	5
DN 25	6
DN 32	8
DN 40	8

❹

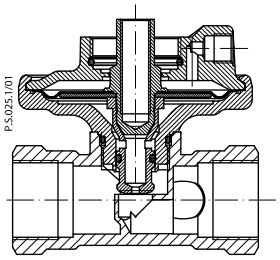

DN 15	**003L8246**
DN 20	**003L8247**
DN 25	**003L8248**
DN 32	**003L8249**
DN 40	**003L8249**

❺

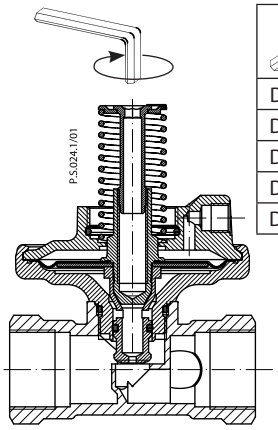

DN 15	4
DN 20	5
DN 25	6
DN 32	8
DN 40	8

❻

Max Nm	
DN 15	20Nm ± 2Nm
DN 20	30Nm ± 2Nm
DN 25	50Nm ± 2Nm
DN 32	80Nm ± 2Nm
DN 40	80Nm ± 2Nm

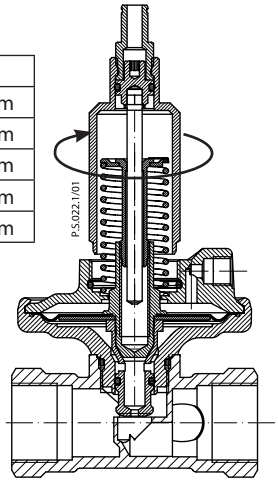

❼

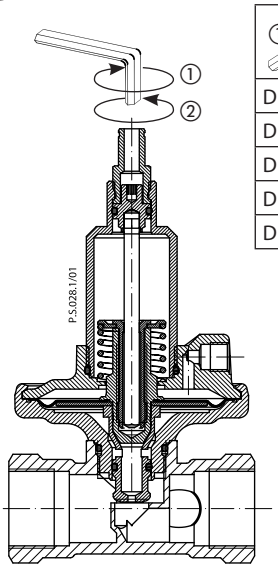

①	
DN 15	2.5
DN 20	3
DN 25	4
DN 32	5
DN 40	5

② Δp settings

	DN 15	DN 20	DN 25	DN 32/40
kPa	No. turns			
38	3.30	1.70	1.41	3.10
37	4.05	2.50	2.21	3.85
36	4.80	3.30	3.01	4.60
35	5.55	4.10	3.81	5.35
34	6.30	4.90	4.61	6.10
33	7.05	5.70	5.41	6.85
32	7.80	6.50	6.21	7.60
31	8.55	7.30	7.01	8.35
30	9.30	8.10	7.81	9.10
29	10.05	8.90	8.61	9.85
28	10.80	9.70	9.41	10.60
27	11.55	10.50	10.21	11.35
26	12.30	11.30	11.01	12.10
25	13.05	12.10	11.81	12.85
24	13.80	12.90	12.61	13.60
23	14.55	13.70	13.41	14.35
22	15.30	14.50	14.21	15.10
21	16.05	15.30	15.01	15.85
20	16.80	16.10	15.81	16.60

❽

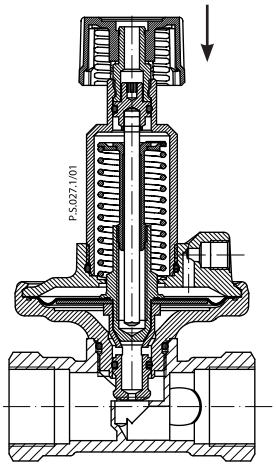

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed.
All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.